

## A GENERAL

The 160A+ has a **PRINT** key which can be used to access the print menu to download either: Summary, Receiver Status, or Scan Results reports. It also can be used to set the Activity Report Timer (which sets the minimum time between printouts) and the RS-232-C port parameters. to accommodate various types of printers.

## B RS-232-C PORT SETUP


- 1 Depress the **PRINT** key.
- 2 Depress the **MORE** key twice. The screen reads:

```

4800 7 NONE 2 NONE
RS-232-C          SET
  
```

**NOTE:** The above screen is the factory default screen. It indicates the following settings:

BAUD RATE: 4800  
 DATA BITS: 7  
 PARITY: NONE  
 STOP BITS: 2  
 FLOW CONTROL: NONE

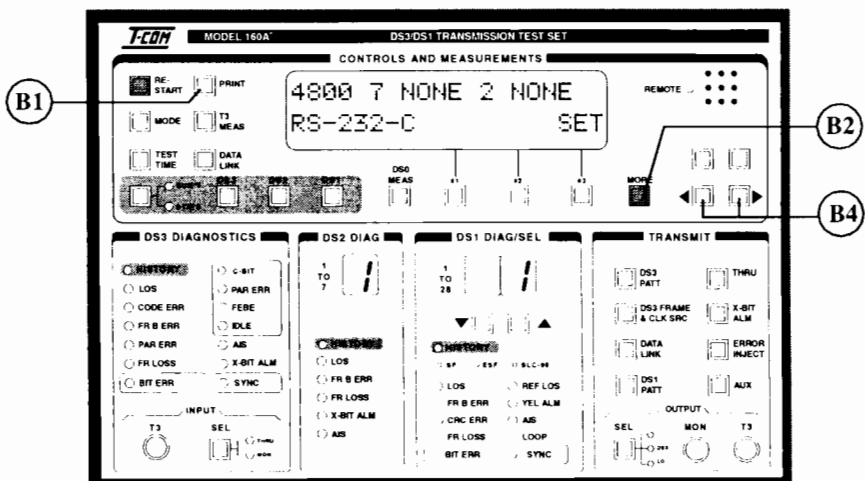

- 3 Depress the #3 key (near SET). The screen reads:

```
Baud Rates: 300 1200
2400 4800 9600  NXT
      |   |   |
      □   □   ■
```

- 4 Using the right-left arrow keys, move the underline to the desired Baud Rate.  
5 Depress the #3 key (near NXT). The screen reads:

```
Data Bits:  7  8
                        GO
      |   |   |
      □   □   ■
```

- 6 If 8 Data Bits are desired, use the right arrow key to move the underline under the number 8; otherwise, leave it under the number 7.  
7 Depress the #3 key (near NXT). The screen reads:

```
Parity: NONE ODD EVEN
                        NXT
      |   |   |
      □   □   ■
```

- 8 If Odd or Even Parity is desired, use the right arrow key to move the underline under the desired setting; otherwise, leave it under NONE.  
9 Depress the #3 key (near NXT). The screen reads:

```
Stop Bits: 1  1.5  2
                        NXT
      |   |   |
      □   □   ■
```

- 10 If 1 or 1.5 Stop Bits is desired, use the left arrow key to move the underline under the desired setting; otherwise, leave it under the number 2.  
11 Depress the #3 key (near NXT). The screen reads:

```
Flow Control:  NONE
DSR CTS XON/XOFF  NXT
      |   |   |
      □   □   ■
```

- 12 If Flow Control is desired, using the right-left arrow keys, move the underline to the desired setting; otherwise leave it under NONE.  
13 Depress the #3 key (near NXT) to return to the screen of Step 2.

## C PRINTING REPORTS

- 1 Depress the **PRINT** key. The screen reads:



- 2 Using the right-left arrow keys, move the underline to either **SUMRY**, **RCVR STATUS**, or **SCAN RESULTS** as desired. Then depress the #3 key (near **GO**) to download the report desired.

## D SETTING THE ACTIVITY REPORT TIMER

- 1 Depress the **PRINT** key; then depress the **MORE** key. The screen reads:



**NOTE:** The above screen indicates the factory default setting of 1 minute.

- 2 Using the right-left arrow keys, move the underline to the desired digit and depress the #1 key (near **UP**) or the #2 key (near **DN**) to change to the desired number of minutes, from 01 to 99.

